



ASSEMBLY INSTRUCTIONS FOR DORIAN SMALL MIRROR <DRN - 670>


WHAT'S INCLUDED

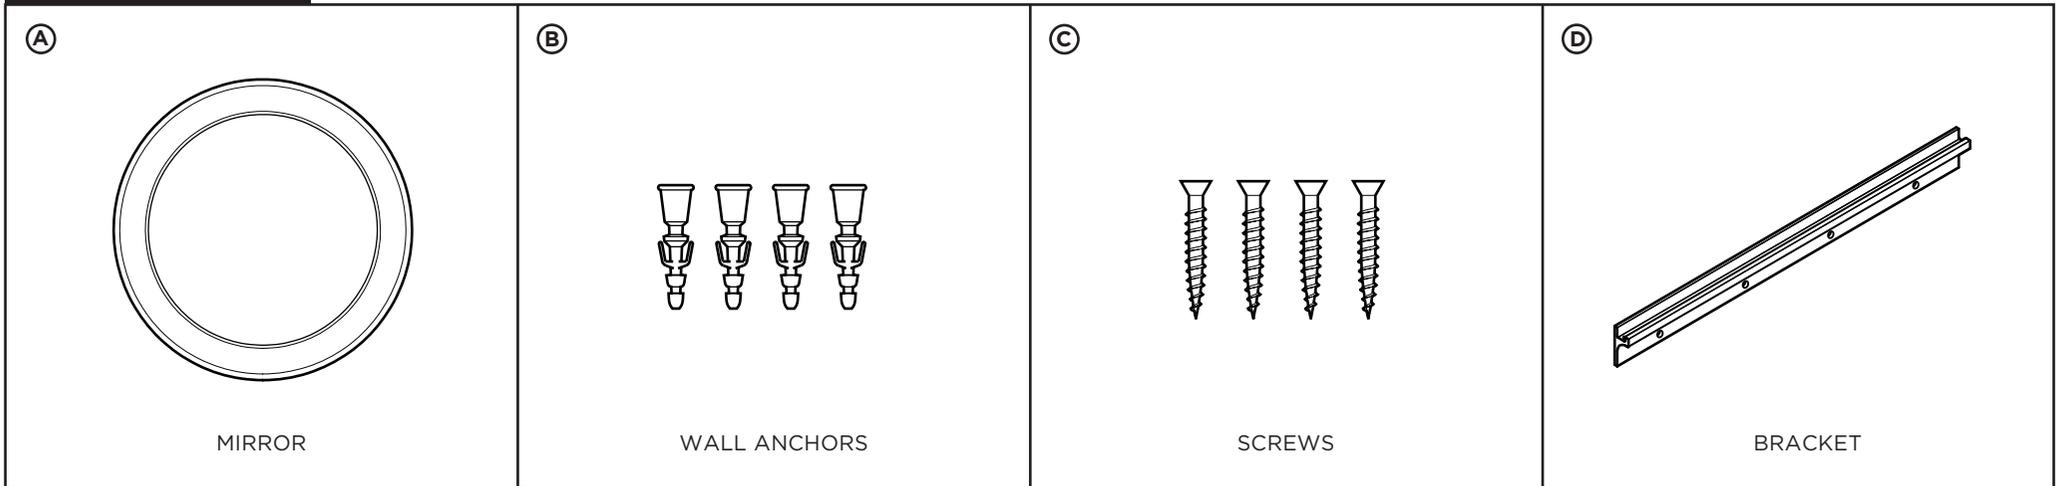


- 1** Unpack all components carefully. Place the bracket **(D)** against the wall where the mirror will be mounted. Using a pencil, note the location of each screw hole on the wall.

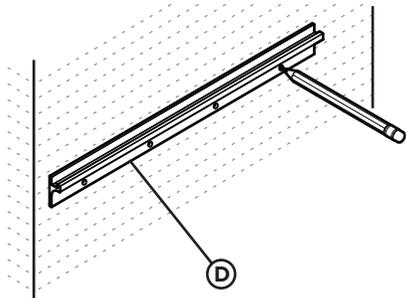

- 2** Using a power drill, make a hole into the wall at each of the pencil marks. Press or tap wall anchors **(B)** into the wall.

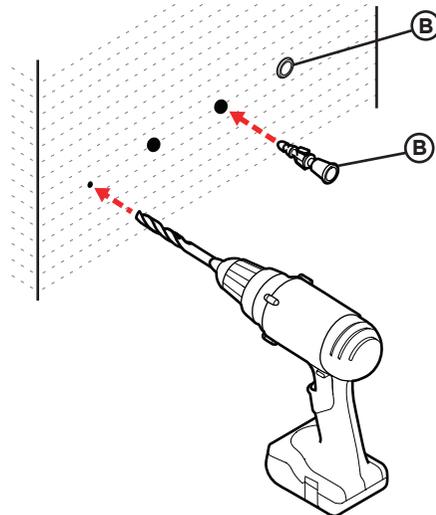

- 3** Replace bracket on the wall, so the holes in the bracket align with the wall anchors. Secure bracket to the wall using supplied screws **(C)**.

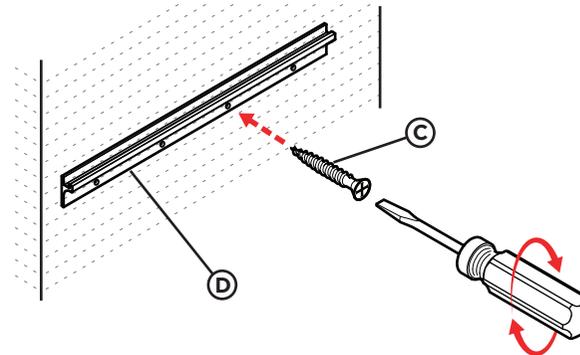

- 4** Find bracket on the back of the mirror **(A)**. Hang the mirror bracket onto the wall bracket.

